


Altro Tegulis™ external corner trim detail

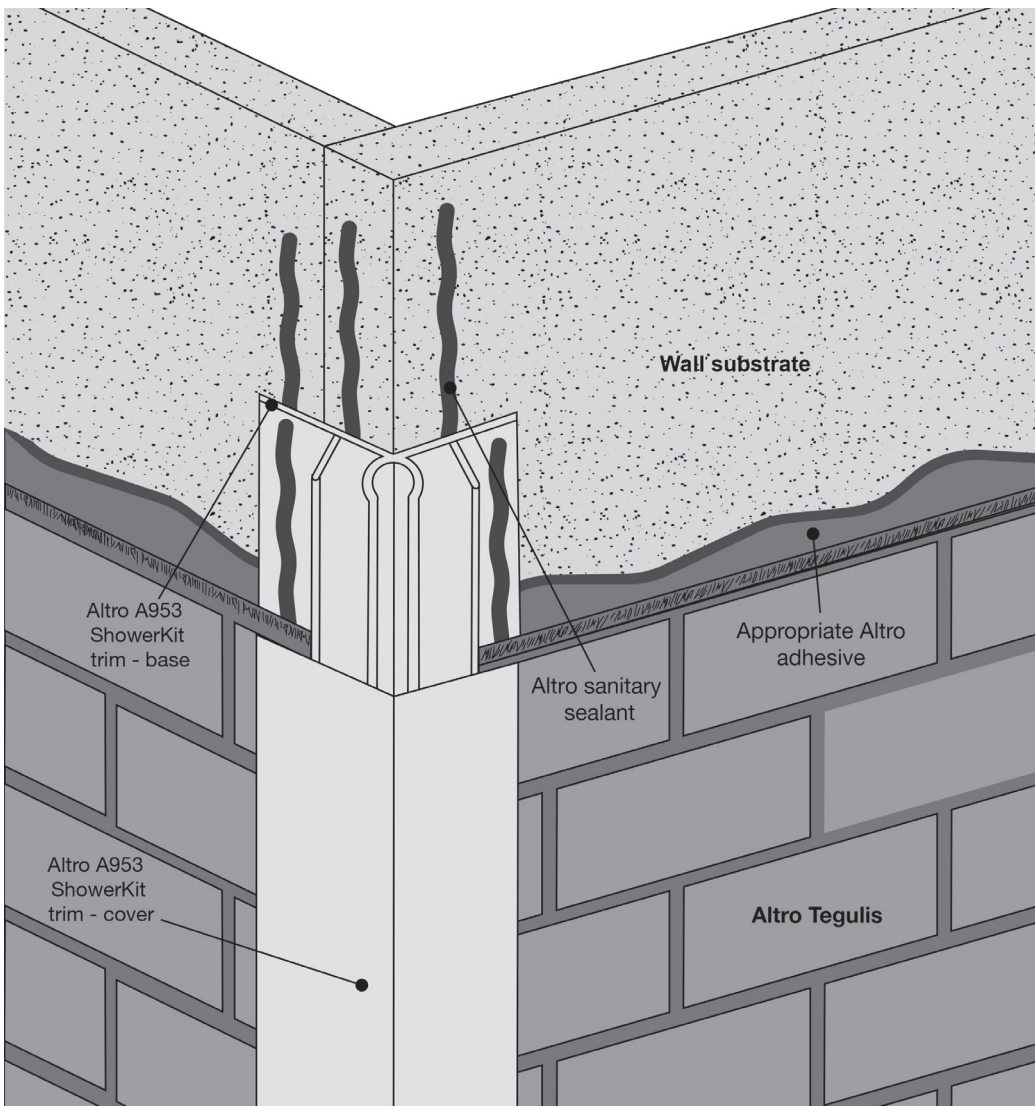

Codes

AltroFix W157

AltroFix W157 1-part adhesive (not recommended for wet environments).

AltroFix W139

AltroFix W139 2-part adhesive.

A953

2-part Altro ShowerKit trim.

For further information or technical advice
tel: 01462 707600
email: enquiries@altro.com or www.altro.com